

SkyTraX Quick Start Guide



Power On: To power SkyTraX on, press and hold the button until the purple indicator LED turns off.

Auto Power Off: Like an AAD, SkyTraX will automatically turn itself off, 14 hours after power on.

Manual Power Off: To power SkyTraX off manually:

- Press and release the button.
- Wait a second for the red indicator LED to appear.
- Press and release the button.
- Wait again for the red indicator LED to appear.
- Press and release the button.
- Wait again for the red indicator LED to appear.
- Press and release the button; the device will now turn off.

Indicator LED: The indicator LED cycles through several colours in sequence every 3 seconds, where each colour has a specific meaning. See the table below for the meaning of all possible LED colours.

LED Colour	Function	Meaning
White ○	GPS =	No fix
Blue ●		Fix
Green ●	State =	Climbing
Purple ●		Falling
Red ●	Battery =	Low
Orange ●	Memory =	Close to full

Downloading Jumps: The easiest way to retrieve jumps stored on SkyTraX is by connecting to a PC using a USB C cable. SkyTraX will appear as a USB mass storage device, with a folder structure that can be opened and navigated in the same way as a USB drive. Jumps are presented by date and time, and can be copied across to the PC for long-term storage and viewing. Please note that this interface is only available when the micro SD card is fitted.

Viewing Jumps: Logged data is presented in a standardised .csv format that is supported by most existing software tools for viewing skydive logs. Supported software includes Flysight Viewer, gSwoop, etc.

Charging the Battery: To recharge the battery, simply connect to any 5V USB charging brick or to a PC using a USB C cable. While charging, the red charging LED remains lit. When this LED goes out, the device is fully charged.



Read and follow all instructions and warnings in the User Manual relating to the LiPo battery. Failure to do so may lead to fire, personal injury, and/or damage to property.

Mounting:

1. **Pocket** - For many applications, SkyTraX can just be left in a secure pocket when jumping. The SkyTraX logo must be facing away from your body in the pocket.
2. **Audible Slot** - Simply fit the device into the helmet as you would any audible altimeter, ensuring that the side with the button and LEDs is facing outwards (away from your head).
3. **Helmet Mount** - Mounting SkyTraX to the top or back of your helmet is the most reliable way of ensuring a good GPS fix throughout a jump. See the SkyTraX User Manual for step-by-step instructions for helmet mounting.

For more information and detailed descriptions of all functions, see the SkyTraX User Manual.